

**INSTALLATION INSTRUCTIONS**

Chevrolet/GMC/Cadillac - Short  
 Suburban, Yukon XL, Escalade EXT Short Vault

TruckVault Inc  
 (800) 967-8107  
 www.truckvault.com

**Tools Required:**

Short Phillips screwdriver                      Power drill driver  
 13mm Socket & ratchet

**Materials Included:**

2 - M8 x 55mm  
 2 - 5/16 x 1 1/4 fender washer  
 1 - L Bracket 202.004.08 A  
 1 - 1/4-20 x 3/4" Machine screw  
 1 - 1/4-20 x 1" Fender washer

**Personnel Required: Two (2) people**

**Congratulations! You now own the finest secure cargo bed storage system on today's market. Enjoy the confidence you'll experience when traveling with your valuables safely locked in your TruckVault.**

1. Open the TruckVault drawers just far enough to reach in and unscrew the rubber stoppers attached to the underside of the top. Now completely remove the drawers and set aside.



2. Open the lid of the cargo storage tray. Remove the rubber mat & hold down bolts in the bottom of the tray. Relocate the jack from its storage compartment on the drivers side cargo panel. The truckvault will block the access to this panel.




3. Remove the factory seat bolt on the back of the 3rd row seat bracket. Install the supplied L bracket on top of the 3rd row seat bracket using the factory bolt. Face the bracket towards the cargo area like shown.



4. Carefully slide the TruckVault into the cargo area of your vehicle.

5. Locate the holes in the bottom of the Vault with the tabs (A) in the bottom of the Cargo area. Install the M8 bolts and fender washers through the holes in the bottom of the vault. Do not over-tighten, just snug.

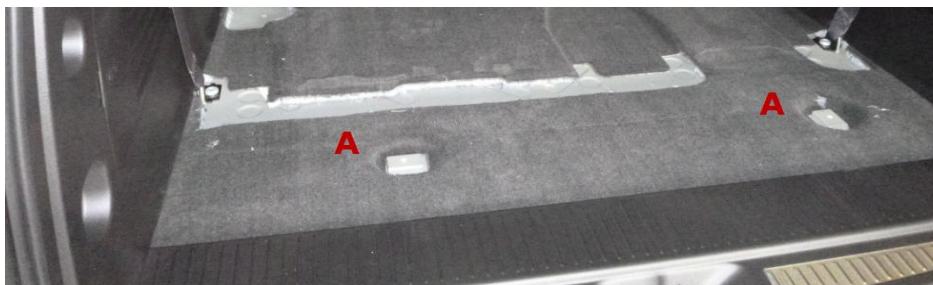

6. With the 3rd row seat folded install supplied machine screw through the back of the bracket and into the back of the Vault.

7. Reinstall drawers and rubber stoppers by reversing the procedure in step 1.