

## INSTALLATION INSTRUCTIONS

Silverado Pickup  
T-CHSILM2-07S

### Tools Required:

Short Phillips screwdriver  
Power drill/driver #2 square bit  
1/8" drill bit 9/16" wrench  
3/8" socket 5/8" wrench

**Personnel Required: Two (2) people**

TruckVault Inc  
(800) 967-8107  
www.truckvault.com



# TRUCKVAULT

### Materials Included:

2 - 3" self tapping screws  
12 - 2" round head wood screws  
12 - 2" flat head wood screws  
4 - 10 1/2" Turnbuckles

**Congratulations! You now own the finest secure cargo bed storage system on today's market. Enjoy the confidence you'll experience when traveling with your valuables safely locked in your TruckVault.**

1. Open the TruckVault drawers just far enough to reach in and unscrew the rubber stoppers (A) and the four screws from the anti break-in brackets (B) attached to the underside of the top. Now completely remove the drawers and set aside. **(Note: not all TruckVault drawers will have anti break-in brackets.)**

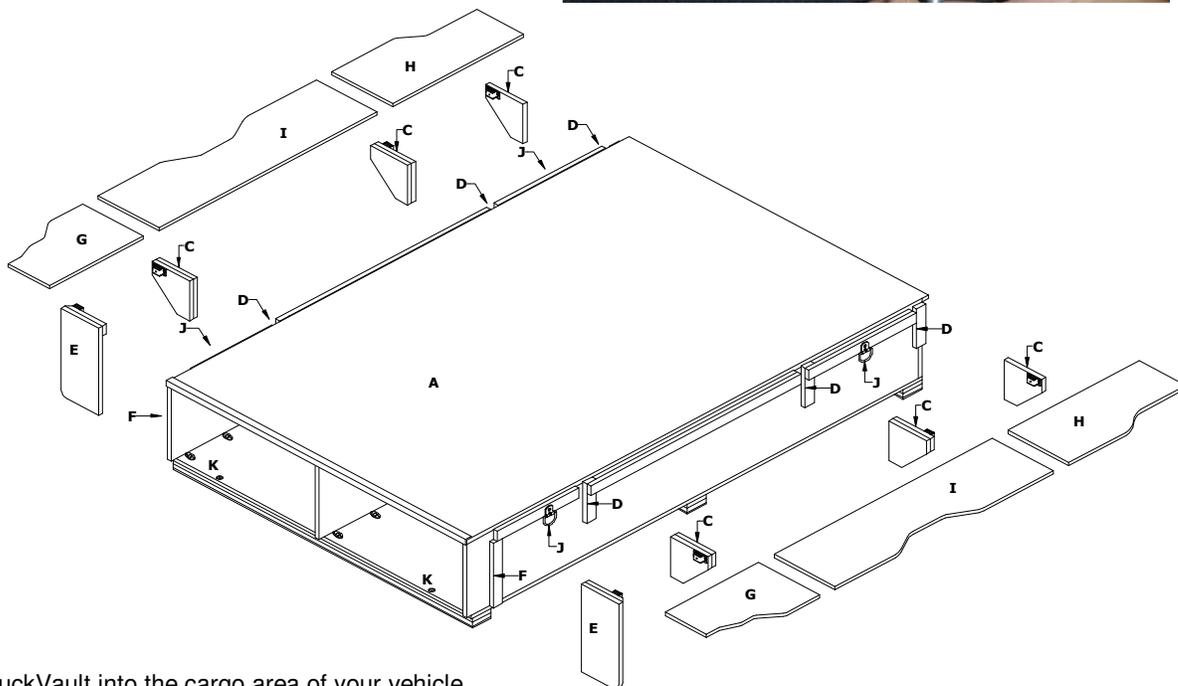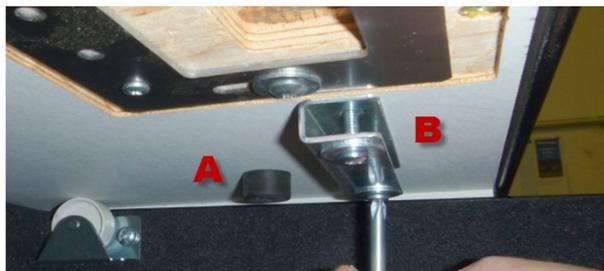

2. Carefully slide TruckVault into the cargo area of your vehicle.
3. Attach the gussets ( C ) to the ledgers ( D ) through the pre-drilled holes with the 2" flat head wood screws.
4. Attach faceplates ( E ) to ledgers ( F ) with four of the 2" round head wood screws through the pre-drilled holes. Set lids ( G,H ) and wings ( I ) in place adjusting the position of the drawer box to center if necessary. Attach wings ( I ) with the remaining 2" round head wood screws through the pre-drilled holes. Remove lids ( G,H ).
5. Hook the turnbuckles in the tie down rings of the vehicles and the D-rings ( J ) on the sides of the drawer box. Tighten the turnbuckles snugly by hand then turn 1 time with the 5/8" wrench. Thighten the jam nut on the turnbuckle with the 9/16" wrench. Replace lids.
6. OPTIONAL: Locate the lock down holes ( K ) in the bottom of the TruckVault. Carefully check underneath vehicle to make sure there is nothing below these holes, such as wiring, gas tank, spare tire, etc. Choose 1 hole on each side of box and using the 1/8" drill bit drill pilot holes. Insert the two 3" self-tapping screws through the holes in the box and using a power drill/driver and a 3/8" socket tighten down snugly. Make sure the heads of the screws are below the top edge of holes.
7. Reinstall drawers, anti break-in brackets, and rubber stoppers by reversing the procedure in step 1.