

**INSTALLATION INSTRUCTIONS**

Ford Explorer with lift platform

TruckVault Inc  
 (800) 967-8107  
 www.truckvault.com

**TRUCK VAULT****Tools Required:**

Short Phillips screwdriver  
 9/16 wrench/socket

**Materials Included:**

TruckVault Lift Installation Instructions  
 4 - 3-Prong knobs


**Personnel Required: Two (2) people**

**Congratulations! You now own the finest secure vehicle storage system on today's market. Enjoy the confidence you'll experience when traveling with your valuables safely locked in your TruckVault.**

- 1 Open the TruckVault drawers just far enough to reach in and unscrew the rubber stoppers attached to the underside of the top. Now completely remove the drawers and set aside. To remove drawers with slides, pull out far enough to expose the black slide locks on each side. Lift up on the slide locks and pull the drawer completely out.



- 2 Locate and remove the track bolts (A) on the side of the Vault.

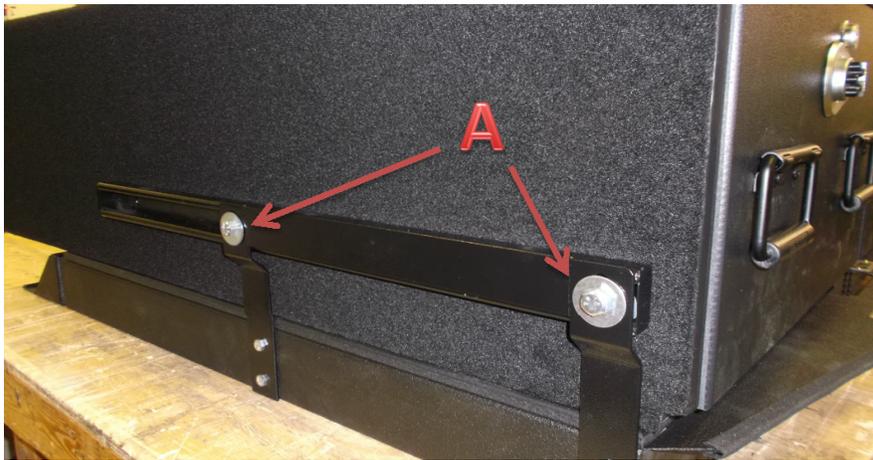

- 3 Remove TruckVault from lift platform, and set aside
- 4 Install the lift platform in the vehicle using the attached TruckVault Lift Installation Instructions.
- 5 Reinstall TruckVault onto lift platform, install supplied 3-Prong knobs (B) through the side brackets where bolts (A) were previously removed. Leave the knobs slightly loose.
- 6 Slide the TruckVault back towards the front of the vehicle along the track. Tighten the 4 hand knobs (B).
- 7 Reinstall the drawers by reversing the procedure in step 1.

**To operate the Lift platform in need of spare tire access, follow the following steps:**

- 1 Remove heavy objects from inside of Vault. Close and latch the drawers.
- 2 Loosen the 4 track knobs (B) along the side of the vault.
- 3 Grab onto drawer handles and slide vault out towards the rear of the vehicle. Vault must be slid all the way out on the track to be able to lift.
- 4 Re-tighten the 4 knobs (B) on the side of the Vault.
- 5 Lift the TruckVault upward, to expose the Spare tire area.
- 6 Reverse previous steps to reinstall TruckVault.

**Congratulations! You now own the finest secure cargo storage system on the market. Enjoy the confidence you'll experience when traveling with your valuables safely locked in your TruckVault.**

**Installation Instructions:**

TRUCKVAULT LIFT - EXPLORER CIVILIAN

**Note: 3rd row seat must be removed for this install.**

**Tools Required:**

Phillips screw driver  
10mm Socket  
1/2" Wrench  
1/2" Socket  
6mm Allen Wrench


**Materials Included:**

2 - Lift arm mount 400.1000.00B  
2 - Civilian spacer 201.019.00  
2 - Civilian support leg 201.018.00  
2 - 3/8" spring nuts  
2 - 3/8 x 1 1/2" hex bolt  
2 - 3/8 x 1" washer  
2 - M12 x 45mm 1.75 pitch hex bolt  
2 - M12 x 1 1/2" fender washer  
2 - M8 x 80mm socket head cap screw  
2 - M8 x 24mm washer  
1 - ABS trim panel  
4 - 3/16 x 3/4" black washer  
4 - 10-32 x 1/2" pan head machine screw black  
2 - 1/4" nuts  
2 - 1/4" washers  
4 - 90lb gas struts  
8 - Ball studs  
8 - 5/16" lock nuts

**Personnel Required: Two (2)**



- 1 Turn the TruckVault Lift deck upside down and install the 8 Ball studs onto the bottom of the lift deck and the lift arms. **NOTE: The ball ends point towards each other.**

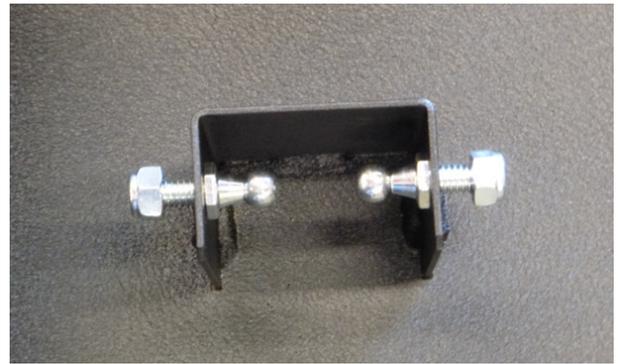




- 2 If the customer has chosen to remove the third row seat from the vehicle, proceed with the process below.

- 3 Remove the 3rd row seats and Seat catch ( A ) from the Cargo area of the Vehicle.




- 4 Assemble the support brackets as shown. Leave the bolts loose to position lift arm mounts to the lift.

- 5 Install the the brackets ( B ) to either side of the spare tire well as shown in the photo below using the M12 bolts and washers. The longer portion of the lift arm mounts towards the rear of the vehicle.

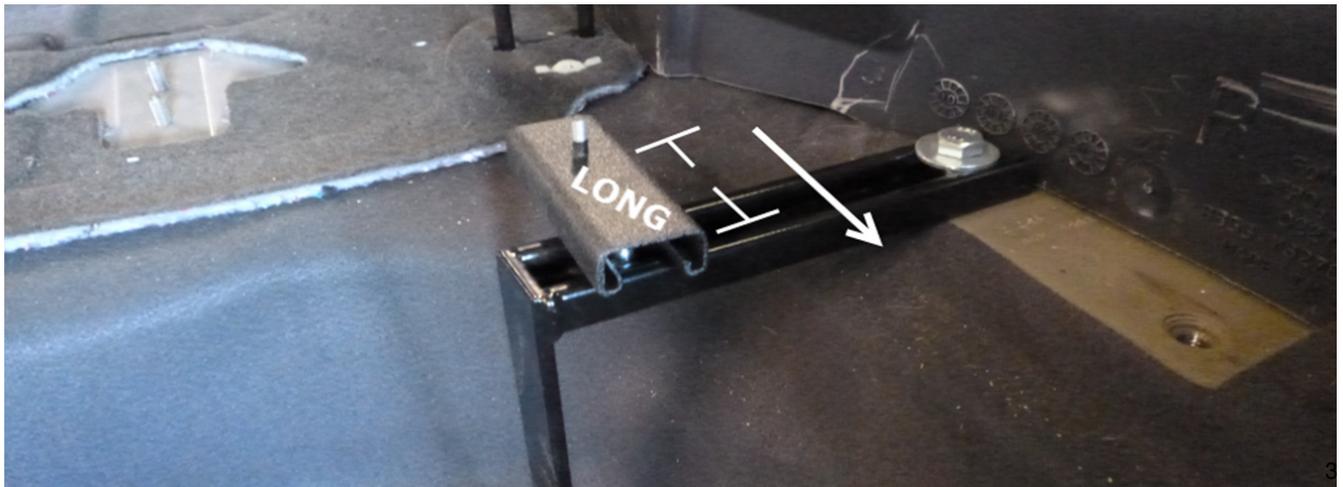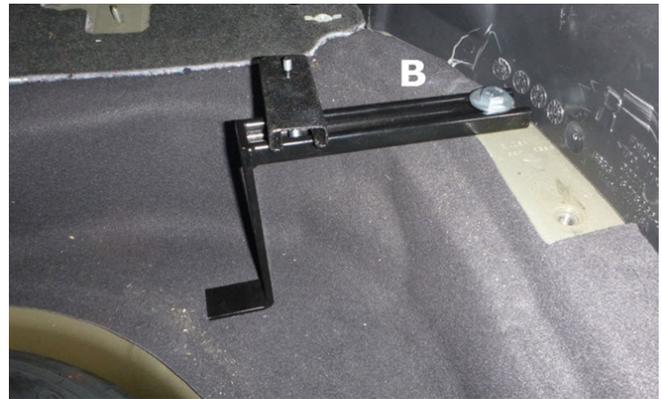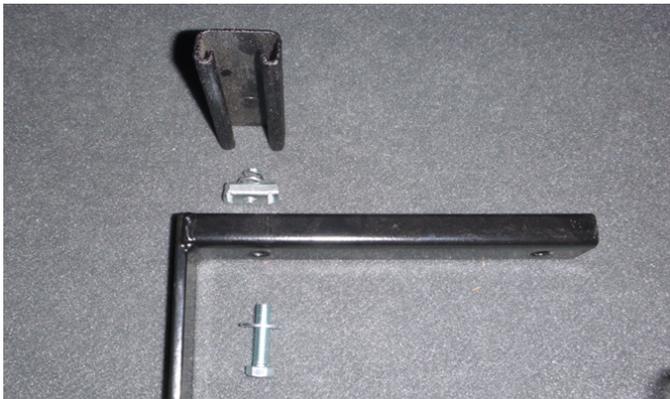



- 6 Slide the TruckVault lift into the cargo area of the vehicle. Align the holes in the bottom of the lift arms with the studs on the lift arm mounts.

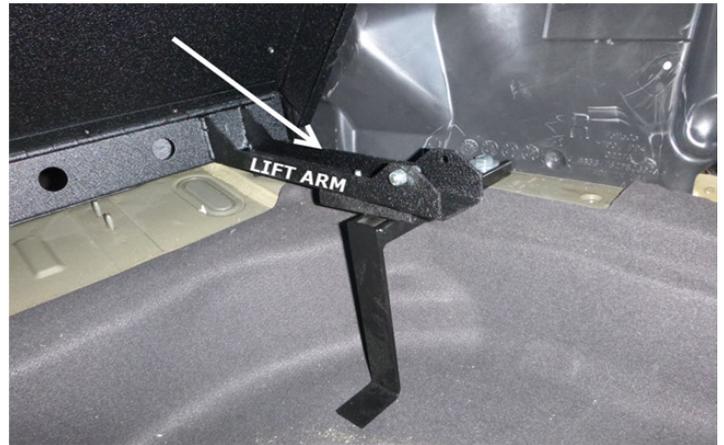

- 7 Lift up the back of the lift and slide in the Civilian spacer blocks ( C ).

- 8 Install the supplied M8 x 45mm bolts through the back of the lift & spacers, into the floor of the vehicle.

- 9 Secure the lift arm to the supports with supplied 1/4" washer and 1/4-20 nut ( D ).

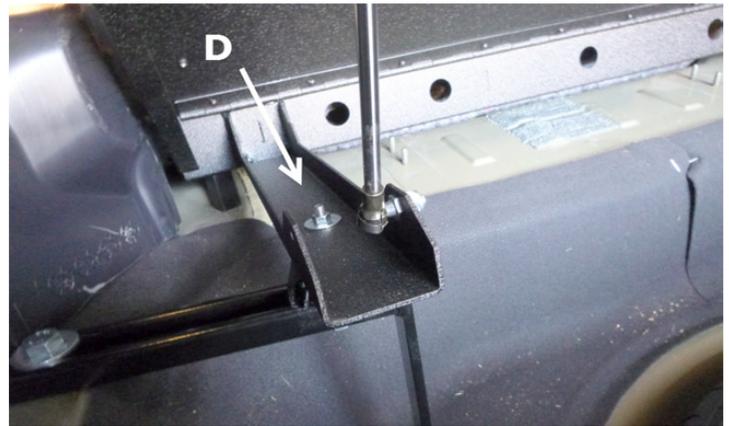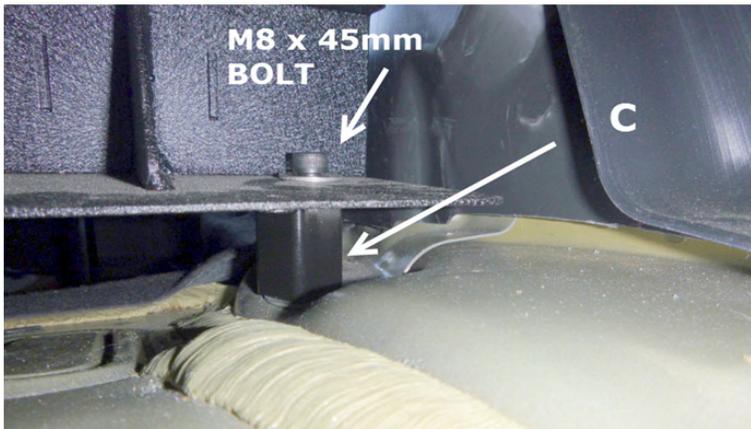

- 10 Tighten all bolts & nuts so the lift is secure to the vehicle.

- 11 With the help of another person, open the lift deck.

- 12 Press the gas struts onto the ball studs as shown. The chrome portion of the struts point downward.

- 13 Close the Lift deck.

